


## **KEY FOB RGB REMOTE CONTROLLER**

QAK48



VER: 19-1

#### **WIRE DIAGRAM**

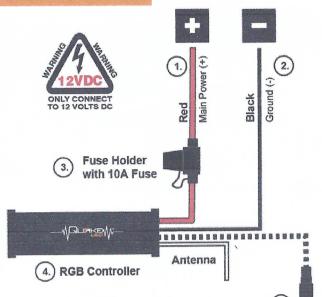

# **GUNKE**

#### PRODUCT SPECIFICATION

KEY-FOB Remote Size: 2.125x1.14x0.55inch LxHxD KEY-FOB Remote Range: 15~40 Feet Controller Size: 3.54x1.18x0.63inch LxHxD

Function: 15 Static Colors, Flashing, Jumping and Fading features, Adjustable Brightness and Adjustable Speeds

#### **REMOTE 4 BUTTON FUNCTION**



BUTTON	REMOTE FUNCTION		
Α	Scroll thru all 17 Programs, Long Press and Hold for 1 thru 15 Dimming 80%, 60%, 40%, 20% return to 100%		
В	Flashing during Static Color Modes; increases cycle speed during 7 Color Jumping modes		
C	Fading during Static Color Modes; Decreases cycle speed during 7 Color Jumping modes		
D	On/Off. Hold for 6 seconds to return to Mode 1 (Red)		

Use Remote to control all Accent Lighting options

#### **COLOR OPTIONS**



TO CHOOSE	
HH	
HH	
HH	
HH	

5.

**RGB Connector** to Accent Lights



NUMBER	A-BUTTON	B-BUTTON	C-BUTTON	D-BUTTON
1	Red	Flashing	Fading	Turn on / Turn off
2	Blue	Flashing	Fading	Turn on / Turn off
3	Pink	Flashing	Fading	Turn on / Turn off
4	Green	Flashing	Fading	Turn on / Turn off
5	Yellow	Flashing	Fading	Turn on / Turn off
6	Agua	Flashing	Fading	Turn on / Turn off
7	Orange	Flashing	Fading	Turn on / Turn off
8	Magenta	Flashing	Fading	Turn on / Turn off
9	Fluro Green	Flashing	Fading	Turn on / Turn off
10	Light Blue	Flashing	Fading	Turn on / Turn off
11	Light Cyan	Flashing	Fading	Turn on / Turn off
12	Purple	Flashing	Fading	Turn on / Turn off
13	Purple/Blue	Flashing	Fading	Turn on / Turn off
14	Light Aqua	Flashing	Fading	Turn on / Turn off
15	Warm White	Flashing	Fading	Turn on / Turn off
16	7 Color Jumping	Faster Jumping	Slower Jumping	Turn on / Turn off
17	Mil. Color Fading	Faster Fading	Slower Fading	Turn on / Turn off

WARNING: If you lose your KEY- FOB Remote Control. You will lose Accent Control capabilities. KEY-FOB Remote Control and the Accent controller are programmed as sets. You must purchase a new controller unit and remote control as a set. NOTE: Program Number and colors might change from time to time. Quake LED reserves the right to change programs and color choices.

### PROBLEM SOLVING

#1, Make sure all wires are connected correctly and the fuse is not blown. If the fuse is blown. Locate and fix that problem before installing a new fuse, Sherlock!
#2, Replace the Remote Battery.

-Wire Diagram is for Illustration Only.
 -Actual wire harness lengths and wire gauge are not to scale.
 -Actual wire harness components are not to scale.



